


STABILIZER Installation

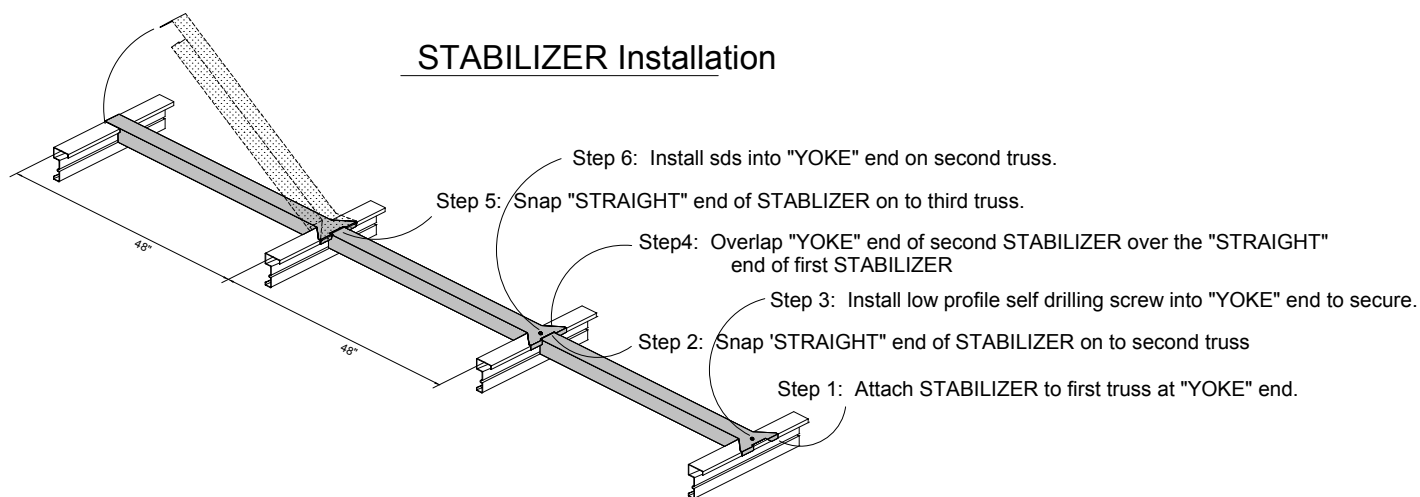

Step 1: Attach STABILIZER to first truss at "YOKE" end.

Step 2: Snap 'STRAIGHT' end of STABILIZER on to second truss

Step 3: Install low profile self drilling screw into "YOKE" end to secure.

Step 4: Overlap "YOKE" end of second STABILIZER over the "STRAIGHT" end of first STABILIZER

Step 5: Snap "STRAIGHT" end of STABILIZER on to third truss.

Step 6: Install sds into "YOKE" end on second truss.